


Series 816 High Bay Express **Assembly Instructions**

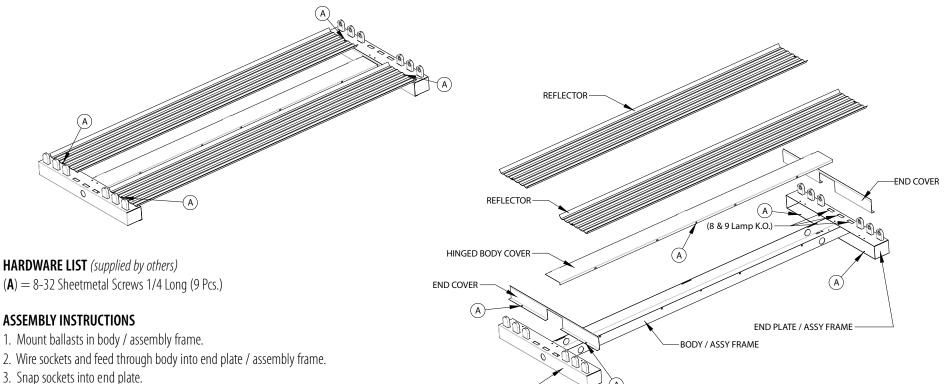

- 4. Install end covers to end plate with screws (A).
- 5. Install hinged body cover to body assembly (insert into hinge position, close cover and use (**A**) screw to secure cover.
- 6. Install reflectors with screws (**A**).

NOTES

Knockout socket holes have been added for 7, 8 and 9 lamp applications. Push knockout through as needed. (third reflector optional). Peel protective coating off Reflector before hanging the fixture.

RECOMMENDED SOCKETS

T5/G5 Vossloh - 108660 BJB - 26.620.2004.50 Etlin Daniels - FL622-L

T8/G13

Vossloh - 109529 Etlin Daniels - FL204

Adam Metal Products Company • P.O. Box 450 • Ledgewood, NJ • 07852 Phone: 973.770.1100 • Fax: 973.770.1105 • www.adammetal.com

END PLATE / ASSY FRAME